

is not operating in the Random Mode, the unit will play the selected recordings in a sequential order. The Random Mode is recommended to keep birds from adapting to a preset pattern of sounds. To operate the unit in Random mode, set switch **5** in **Mode settings** as follows:

Switch 5	Mode
ON	RANDOM (Mode ON)
OFF	NOT RANDOM (mode OFF)

ULTRASONIC FREQUENCY SWITCH

The ultrasonic sounds play regardless of the other settings you choose. HIGH, MED and LOW refer to the frequency of the ultrasonic sound waves. We recommend you begin on LOW, and then vary between the three every so often (during routine maintenance, for example).

PROGRAMMING EXAMPLE

Recording Switches:	Results
1, 3, 5 and 6 to "ON" position	Plays Sound 1, 3, 5 & 6

Mode Switches

1 = "OFF" position	
2 = "ON" position	(Medium), every 1 to 4 minutes
3 = "ON" position	
4 = "OFF" position	Operates during daylight hours only
5 = "ON" position	In random, non-sequential order

VOLUME CONTROL

The unit has a volume control dial for the sonic (audio) sounds on the front panel of the unit. Turning the dial toward low will result in reduced sound output and rotating the dial toward high will result in an increase in sound output.

CAUTION: Take care when turning the dial since the unit may be in an inactive state when the dial is rotated. It could then reactivate at a very high level of sound which could be painful to your ears.

POWER SWITCH

The power switch enables the unit to operate. Slide the switch to the ON position to start the unit. If you turn the unit OFF, be sure to leave it off for about 30 seconds before turning it back on to allow the electronics to properly reset.

PREVENTATIVE MAINTENANCE

Since 1967, our products have provided years of trouble-free service with only a minimum of routine maintenance. This unit is specifically designed for extensive outdoor use and temperature extremes. The electronic circuits inside the unit are coated for oxidation and moisture protection and need no maintenance. For the longest life of external components, clean off any excess dirt or corrosion. Twice a year, lubricate the switch sockets and the connections with silicone spray.

TROUBLESHOOTING

PROBLEM	SOLUTION
Unit is on, but no sound is heard	<ul style="list-style-type: none"> Check volume settings Check time of operation settings. Check that at least one bird is selected to play.
Unit is on, but plays the same bird over and over, regardless of settings	Reset the unit by turning it off for 30 seconds and then back on
Unit is <u>not</u> operating properly in the DAY or NIGHT mode	<ul style="list-style-type: none"> Double check Mode switch settings Make sure photocell is <u>not</u> obstructed. Make sure the photocell is not affected by bright lights in either the front or the back of the unit.

LIMITED WARRANTY

THIS SUPER BB PRO UNIT IS GUARANTEED AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP FOR SIX MONTHS FROM DATE OF PURCHASE. BIRD-X WILL REPLACE OR REPAIR, PROVIDED DEFECT OCCURS UNDER NORMAL USE. UNITS ALSO CARRY A 30-DAY PERFORMANCE GUARANTEE. IF USER IS NOT SATISFIED WITH RESULTS, UNIT MAY BE RETURNED WITHIN 30 DAYS FOR CREDIT LESS A 15% HANDLING AND RESTOCKING CHARGE. RETURNS ACCEPTED ONLY WITH AUTHORIZATION FROM OUR CHICAGO OFFICE.



300 North Elizabeth Street • Chicago, IL 60607
 ph. (312) 226-2473 • fax (312) 226-2480
 Toll Free US & Canada 800-662-5021
 www.bird-x.com
 EPA Establishment Number 075130-OR-001

Digital Bird Repeller

Super Broadband PRO™

PRIOR TO INSTALLATION

Your complete Super Broadband Pro kit includes a control unit, power adapter and four speakers. Open the control unit by lifting the two latches on the side of the enclosure.

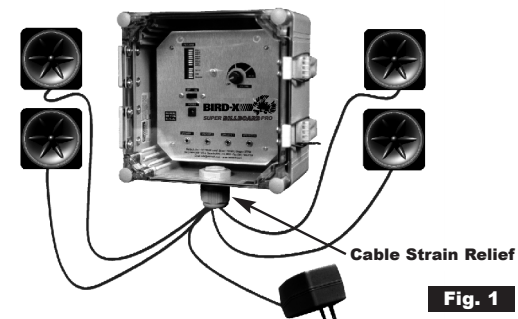


Fig. 1

Prior to operation, route the speakers and power cables from their respective jacks on the control panel down through the cable strain relief in the lower part of the enclosure, as shown in Figure 1.

IMPORTANT: Be certain that the power switch is in the OFF position and the volume control is set to the minimum (LOW) volume level (counterclockwise) as shown in Fig. 2 while plugging the speaker and power cords into the control unit.



2

HOW IT WORKS

Sonic and ultrasonic sounds sequence through all four speakers. Sonic sounds play according to the programming options you choose. Ultrasonic sounds are always active --day and night-- regardless of programming, however they won't play *during* the sonic sounds.

INSTALLATION

- 1) Use the mounting hardware (included) to mount the control unit box to a wall, post or other vertical surface.

